
| AR83.25-P-1405GH | Remove/install cover at air intake | 3.3.97 |
|---|---|---|

**MODEL 163.113 /128 /136 /154 /157 /172 /174 /175**

*1 Windshield wiper arms*
*2 Rubber seal*
*3 Cover*
*4 Nuts*
*5 Metal clips*
*6 Water deflector panel*

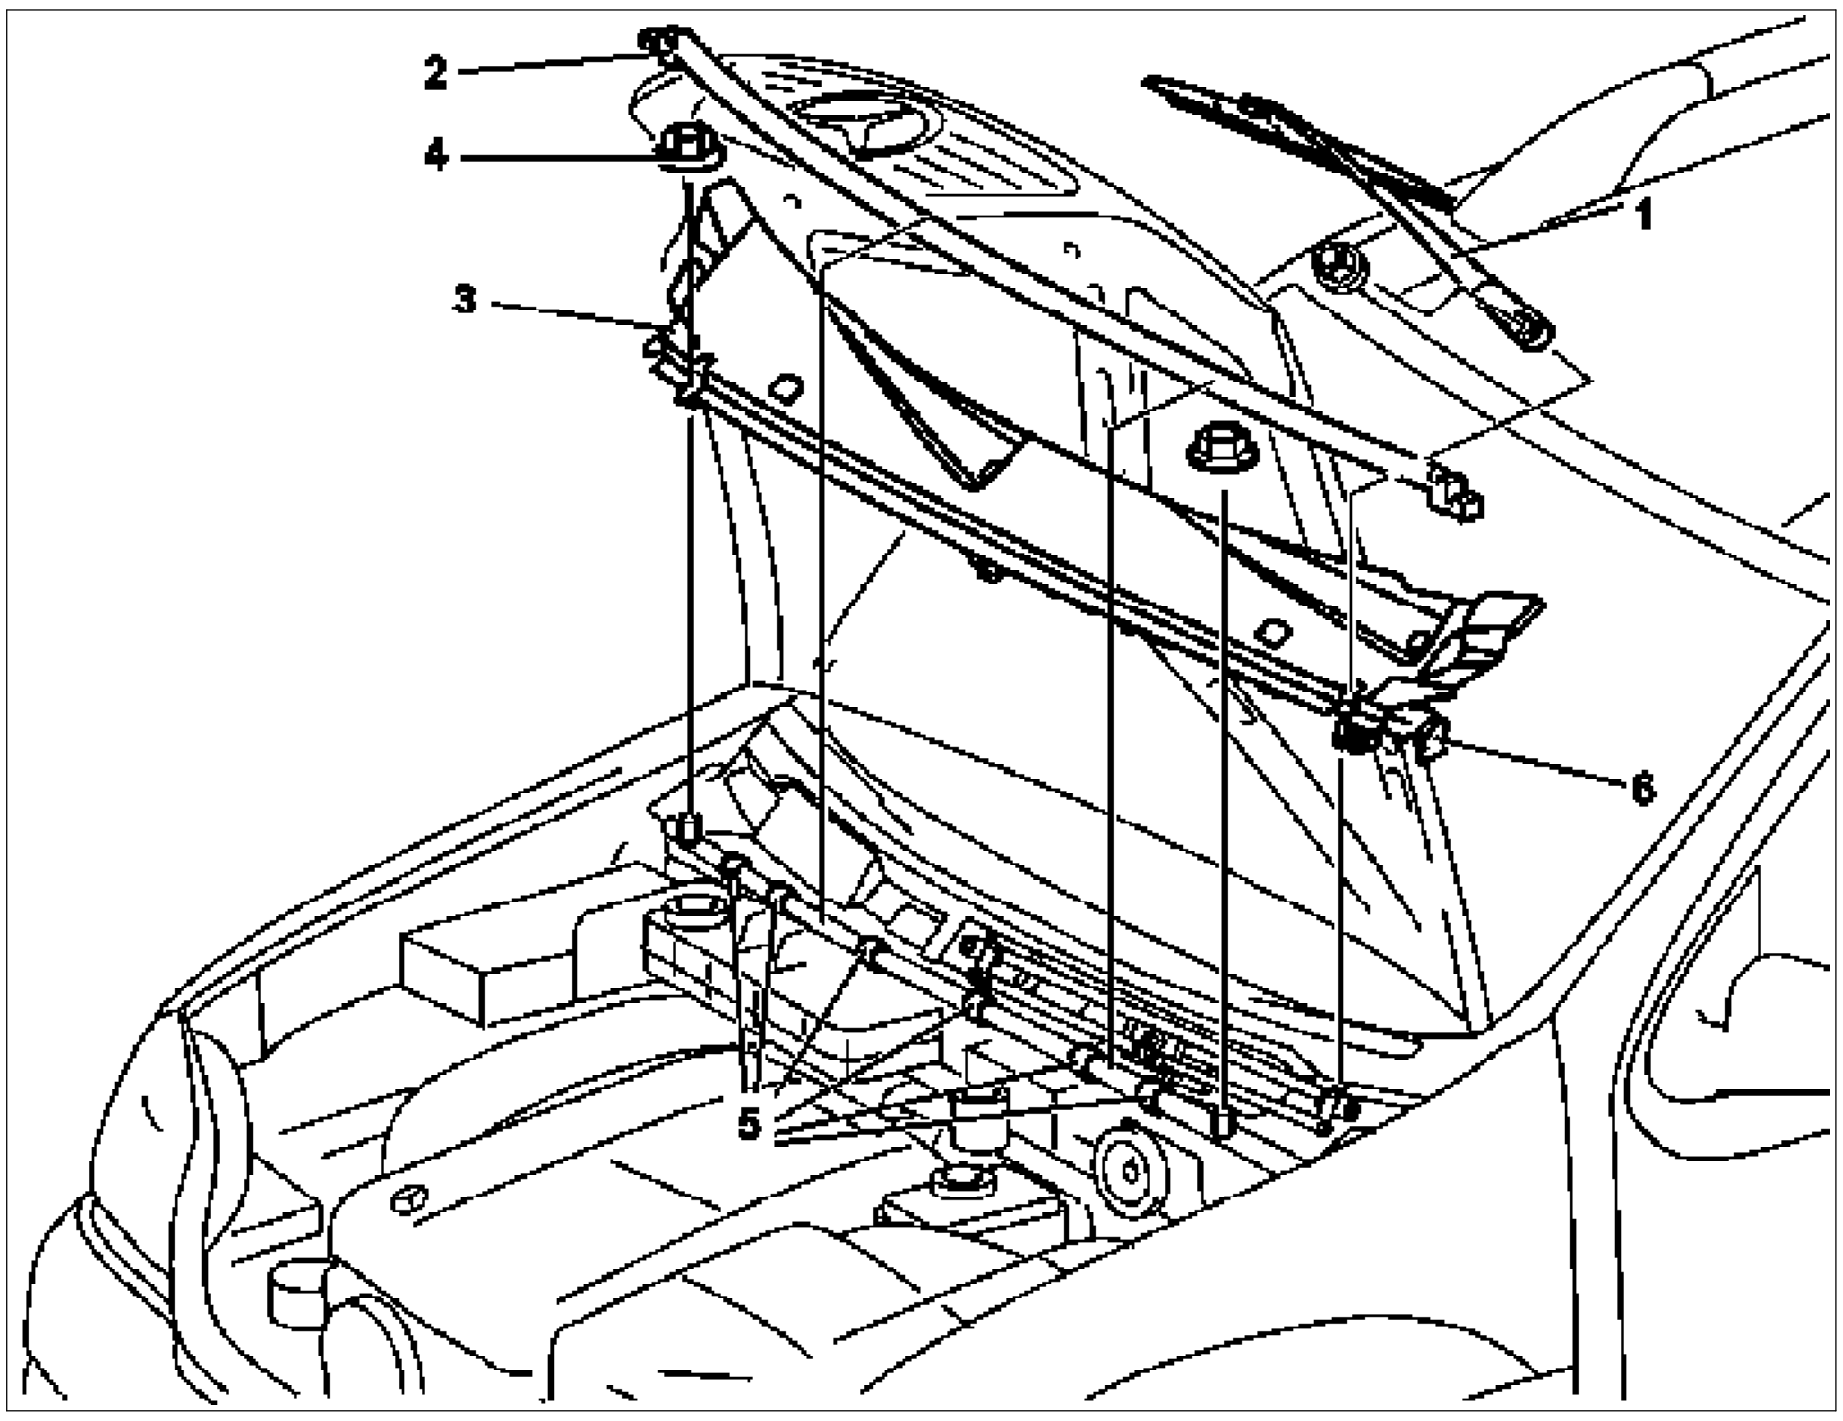


P83.25-2012-06

| | **Remove/install** | | |
|---|---|---|---|
| ⚠ **Danger!** | **Injury hazard** by trapping or crushing, in extreme cases with loss of limbs when reaching into windshield wiper mechanism | Always remove ignition key when working on windshield wiper mechanism. | AS82.30-Z-0001-01A |
| 1 | Remove wiper arms (1) | | AR82.30-P-6100GH |
| 2 | Detach rubber seal (2) from firewall | | |
| 3 | Remove metal clips (5) | | |
| 4 | Unscrew nuts (4) at firewall | ℹ Remove foam insert. | |
| 5 | Seal off washer fluid hose at check valve | | |
| 6 | Remove cover (3) together with water deflector panel (6) | ℹ If damaged, detach water deflector panel (6) from cover (3).<br>ℹ **Installation:** Lubricate upper edge of cover and windshield at bottom with soapy water. | |
| 7 | Install in the reverse order | | |